

- 
1. MOTRONIC ENCODING PLUG
  2. FUEL GAUGE/DISPLAY DAMPING
  3. STARTER MOTOR RELAY
  4. LOAD RELIEF RELAY
  5. HORN RELAY
  6. FUEL PUMP RELAY
  7. MOTORONIC RELAY
  8. ABS WARNING RELAY
  9. NOT IN USE
  10. FLASHER UNIT
  11. FUSES

1. INSTRUMENT CLUSTER /  
BRAKE / REAR LIGHTS
  2. PARKING LIGHT
  3. FLASHING TURN INDICATORS /  
CLOCK
  4. POWER SOCKET
  5. MOTRONIC
  6. FUEL PUMP
  7. HEATED HANDLEBAR GRIPS
  8. RADIO
  9. SPARE
  10. SPARE
- 

