


R 1150 RT-P Fuse Box

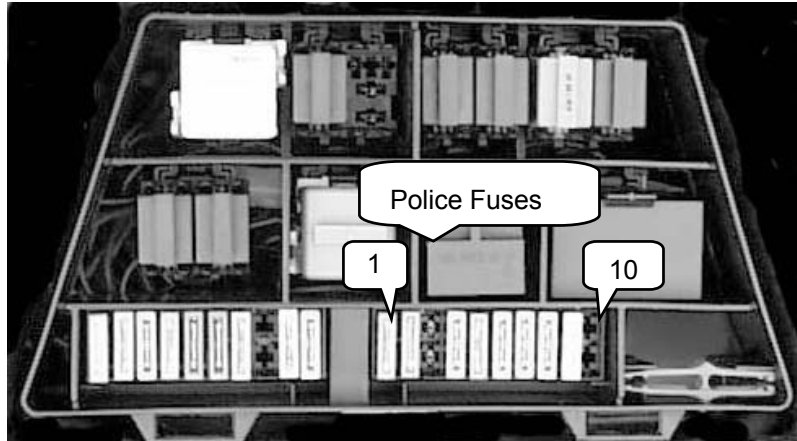

Fuse Locations / Function

1	Siren Trigger	7.5A
2	Auxiliary fan	5 A
3	Aux Tail / Rear Fog Lights	10 A
4	Radio equipment	max. 20 A
5	Rear flasher system	7.5A - 15 A
6	Siren Amplifier	15 A
7	Emergency lights	15 A
8	Police Battery Power Socket	15A
9	MC Horn (With Ignition Off)	5A
10	Radar Power + Speed Signal (Blue Plug)	5A

Power Activity

- 1 Switched Power from MC Battery
- 2 Switched Power from MC Battery
- 3 Switched Power - HL Circuit – MC Battery
- 4 Constant Power from Police Battery
- 5 Constant Power from Police Battery
- 6 Constant Power from Police Battery
- 7 Constant Power from Police Battery
- 8 Constant Power from Police Battery
- 9 Constant Power from Police Battery
- 10 Constant Power from Police Battery

